

How to adjust your trigger bar support spring


You will need an awl or pick tool to pull the spring out from under the trigger bar. Adjustments should be made with the hammer forward (at rest). Left and right sides of the gun are from the position you would hold it to shoot. Adjust the spring one side at a time following the instructions below.

Right Side



Use a pick tool to pop the trigger bar support spring out from under the trigger bar. It should come to rest at least half way up the trigger bar. The picture shows the proper position. If your spring does not come up at least half way, pull the spring up, stretching it, to make it rest at least this high. It is okay for it to rest at the top of the trigger bar but do not deform it to the point where it is higher. After adjusting the spring gently push it just enough to get it back under the trigger bar.

Left Side

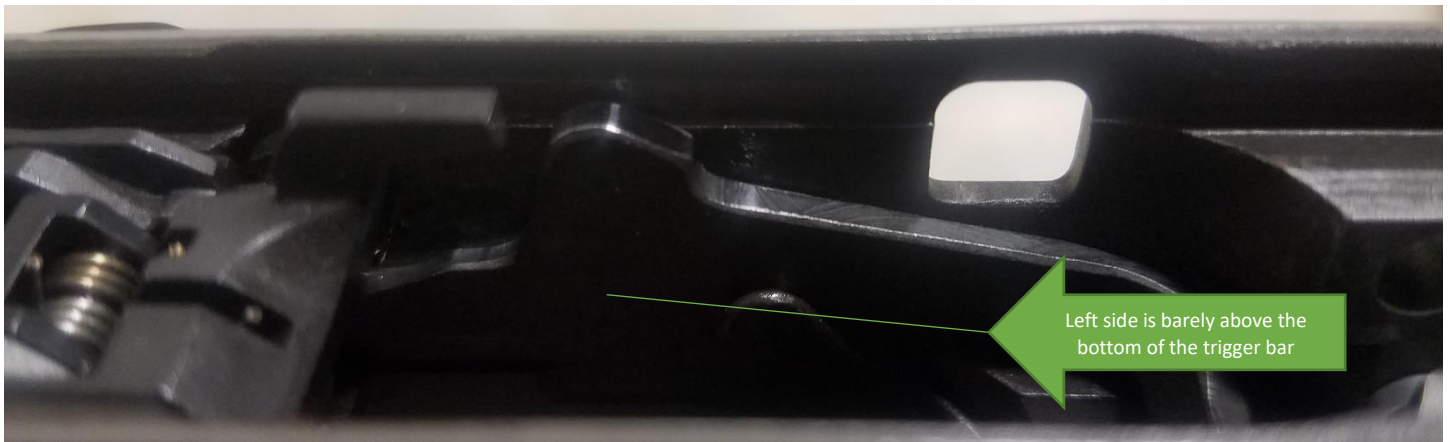

The left side should be adjusted as well but it should barely stay popped out from under the trigger bar. If it comes to rest higher than in the picture you may have to push it down. The left side having too much tension will result in a false reset (an extra audible click when letting the trigger back out for a single action shot).